



Parts needed to mount the LOKOM extrusion

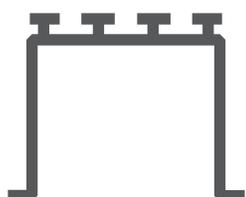

Extrusion (A)



End cap (B)

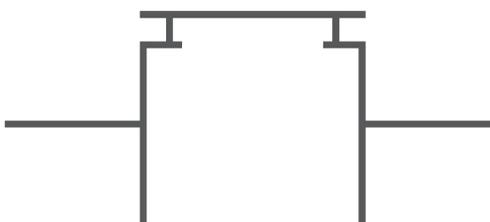

Mounting strip (C)



Technical end cap (D)



LED strip (E)



Cover (F)



Clip (G)


Tools needed for mounting:

- drill
- screwdriver


WARNING! All LED strips should be connected to a 12 V or 24 V power supply.

IMPORTANT: The mounting instructions present the basic form of assembly. More methods and related accessories can be found at www.KlusDesign.eu


1. Drill holes in the extrusion (A) and mounting strip (C) for the power cable.

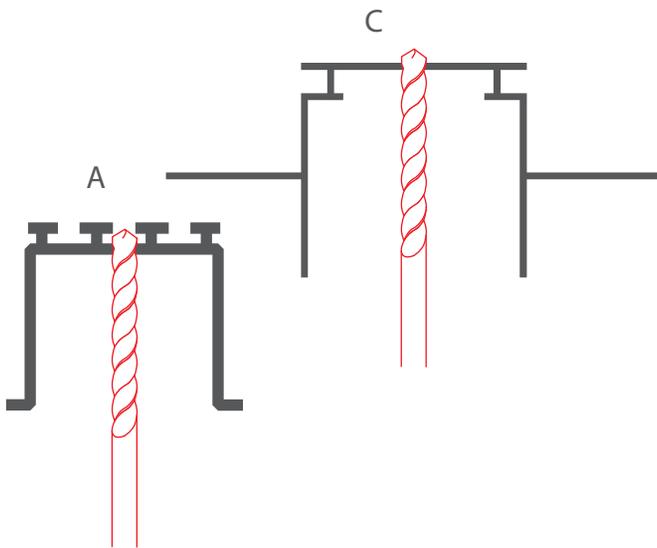


2. Insert the end cap (D) into the mounting strip (C), and tighten mount the strip with screws.

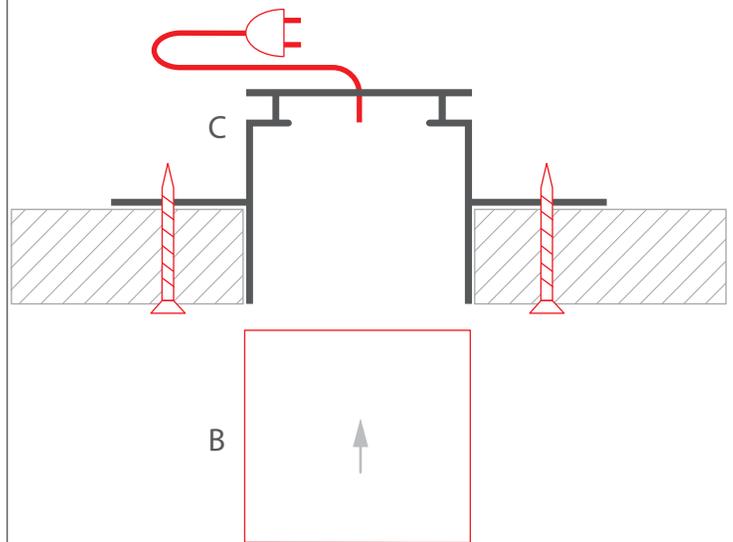

3. Slide the clips (G) into the extrusion (A).

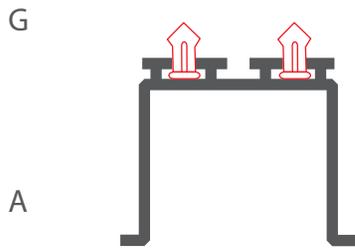

4. Mount the LED strip (E), insert the cover (F), insert the end cap (B).

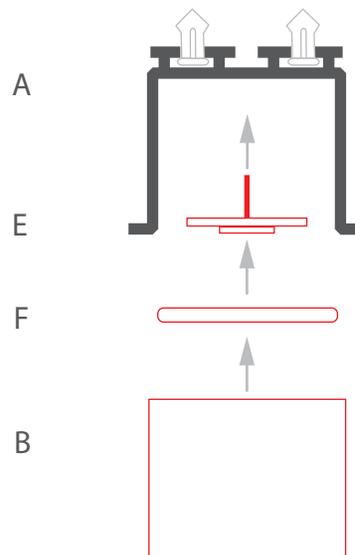

5. Connect power and mount the extrusion (A) in the mounting strip (C).

