


Parts needed to assemble the STEKO Fixture

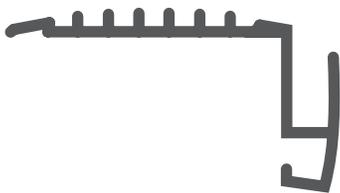

Extrusion (A)



End cap (B)



Silicone string (C)



LED Tape (D)


Tools needed for mounting:

- drill
- screwdriver
- glue


NOTE! All LED strips must be connected to a 12 V or 24 V power supply.

IMPORTANT: The manual presents the simplest mounting procedure. More mounting procedures and related accessories can be found at www.KlusDesign.eu


1. Drill a hole in the the extrusion (A) where the power wire will be fed to the LED tape.

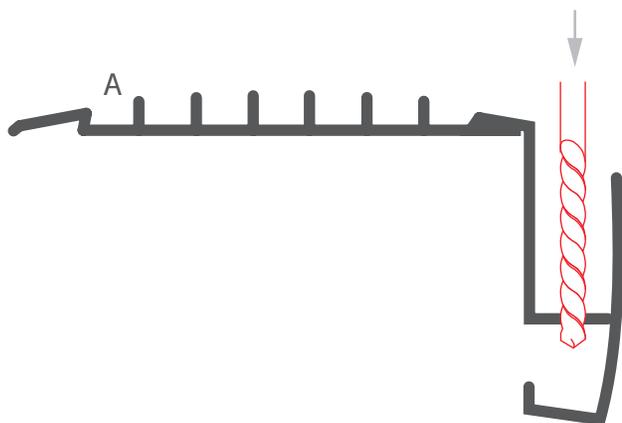


2. Mount the LED (D), then run the power wire through the hole drilled earlier.

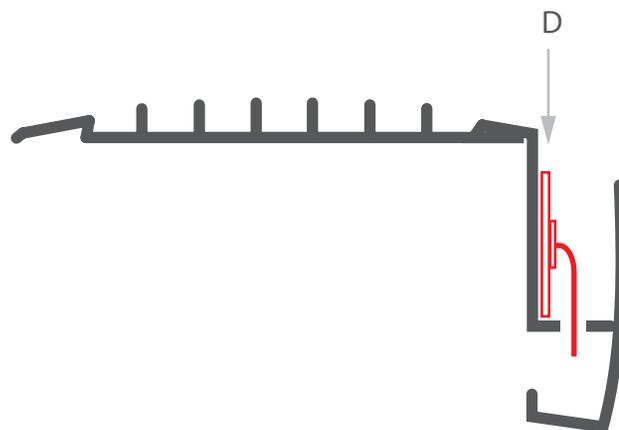

2. Fasten the extrusion (A) to the surface with appropriate screws for the substrate.

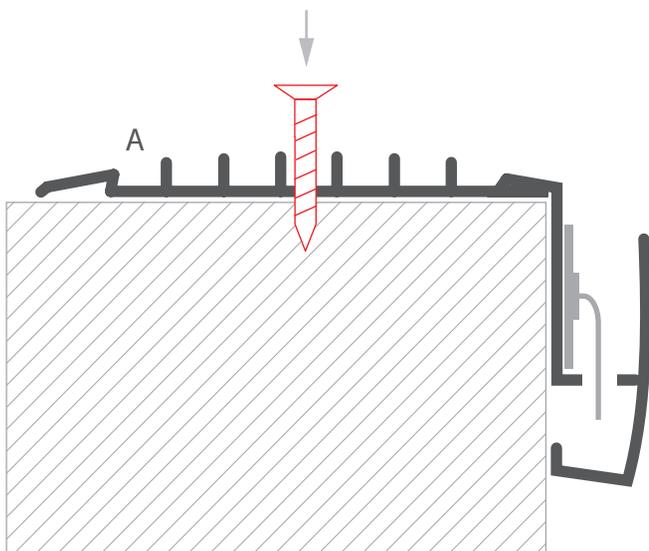

4. Insert the silicone string (C) into the extrusion above the LED tape.

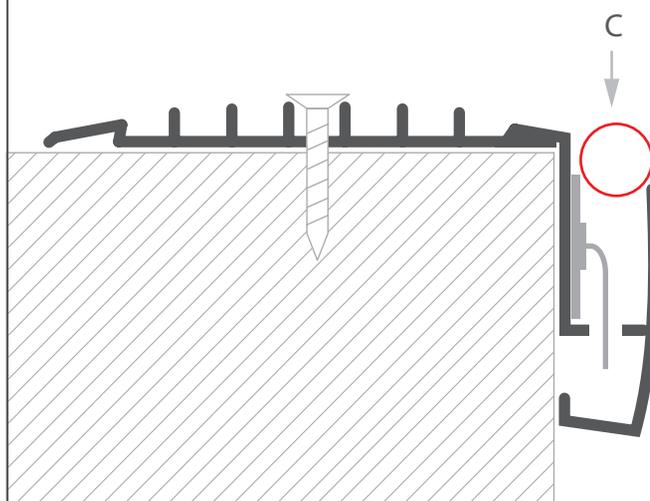

5. Glue the end cap (B) to the extrusion.

