


**Parts needed to mount the TEKNIK-ZM extrusion**

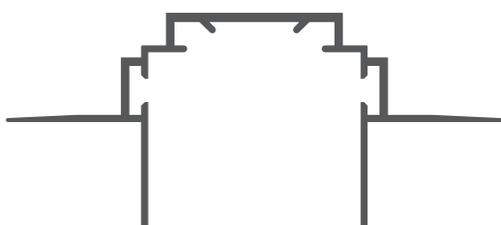

Profile (A)



End cap (B)


**Tools needed for mounting:**

- drill
- screwdriver


**NOTE!** All LED strips must be connected to a 12 V or 24 V power supply.

**IMPORTANT:** The manual presents the simplest mounting procedure.  
More mounting procedures and related accessories can be found at [www.klusdesign.eu](http://www.klusdesign.eu)

**1.** Drill holes in the extrusion (A).

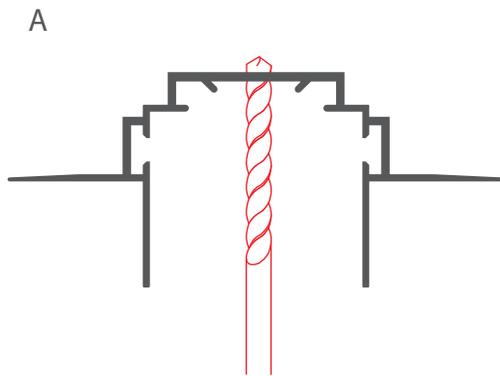

**2.** Insert the end cap (B) into the extrusion (A), and then mount the extrusion with screws

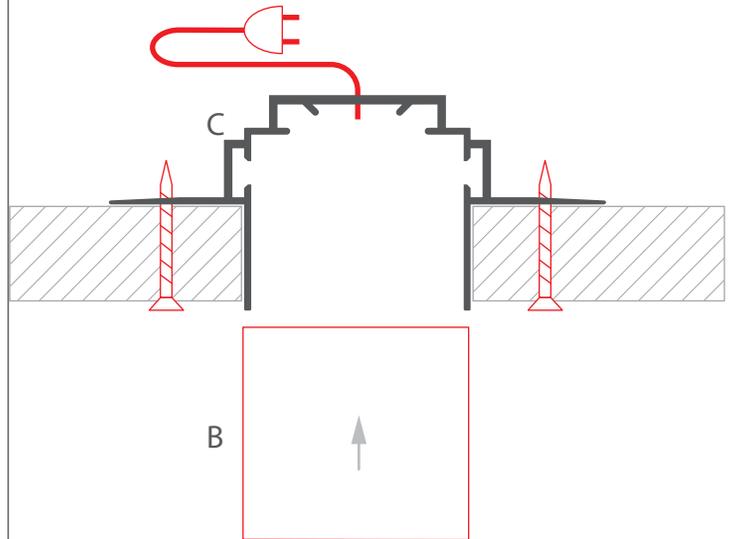

**3.** Slide the clips into the LED fixture, then connect power and insert the LED fixture into the extrusion (A). The number of clips should be: 4 for 1-meter long profiles, 9 for 2-meters long profiles and 14 for 3-meters long profiles. First and last clip should be placed 5-7 cm from the end of the profile.

**ATTENTION:** Extrusions can be connected with ZM connectors.

