

**Parts needed to mount the KOPRO extrusion**



Extrusion (A)



End cap (B)



Cover (C)



LED strip (D)



Spring (E)


**Tools needed for mounting:**

- drill
- screwdriver


**NOTE!** All LED strips must be connected to a 12 V or 24 V power supply.

**IMPORTANT:** The manual presents the simplest mounting procedure.  
More mounting procedures and related accessories can be found at [klusdesign.com](http://klusdesign.com)


**1.** Drill holes in the mounting surface (min.  $\varnothing$  10 mm) to mount the extrusion.

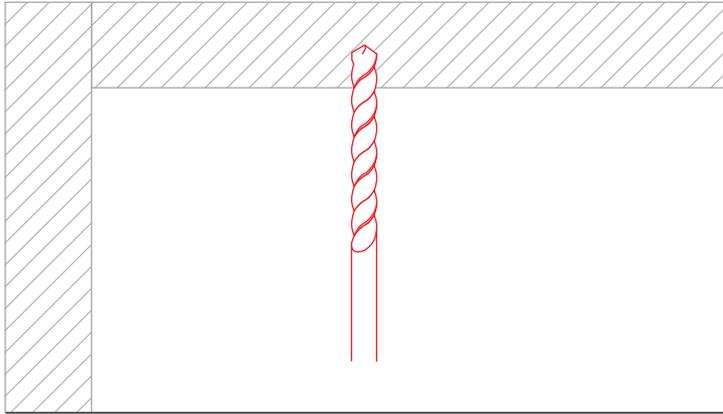


**2.** Drill holes in the extrusion for mounting.

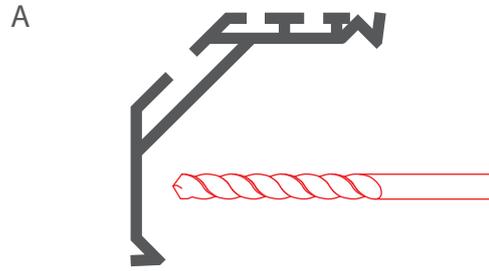

**3.** Mount the LED strip (D), and slide the spring (E) into the extrusion (A).

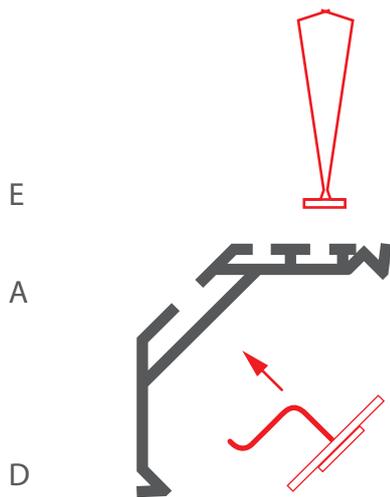

**4.** Connect power, then mount the extrusion in the drilled holes using springs.

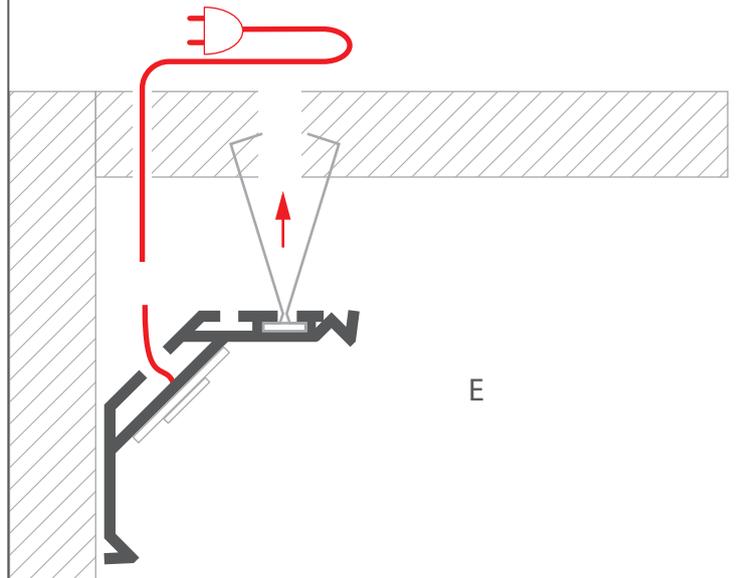

**5.** Insert the cover (C) and the end caps (B).

