


### Parts needed to mount the FOLED-BOK extrusion

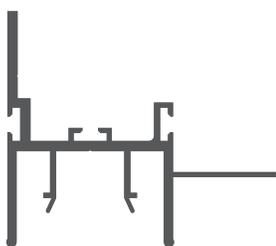

Extrusion (A)



Cover (B)



LED strip (C)



Stretched ceiling (D)

### Tools needed for mounting:


- drill
- screwdriver
- screws
- hand saw

**NOTE!** All LED strips must be connected to a 12 V or 24 V power supply.


**IMPORTANT:** The manual presents the simplest mounting procedure.

More mounting procedures and related accessories can be found at [klusdesign.eu](http://klusdesign.eu)


**1.** Drill holes in the extrusion (A) to lead out power cables.

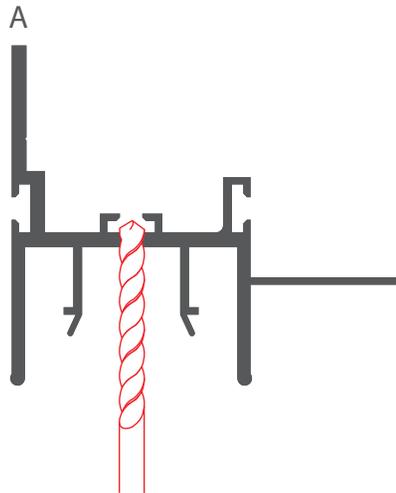


**2.** Mount the LED strip (C) and lead out the power cable.

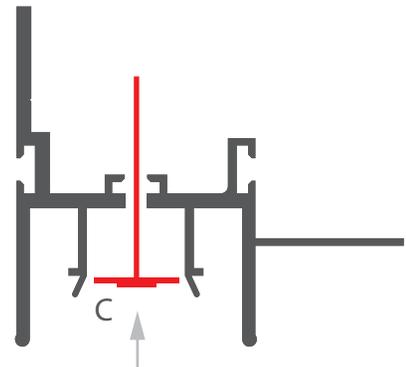

**3.** Attach the extrusion (A) to the wall with screws and connect power.

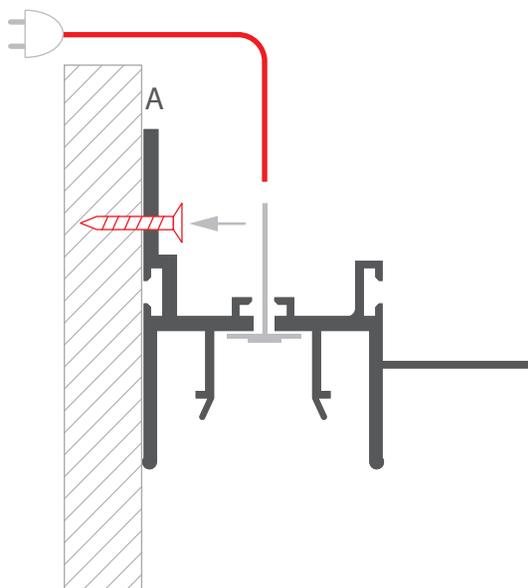

**4.** Insert the hook of the stretched ceiling (D) into the extrusion (A).

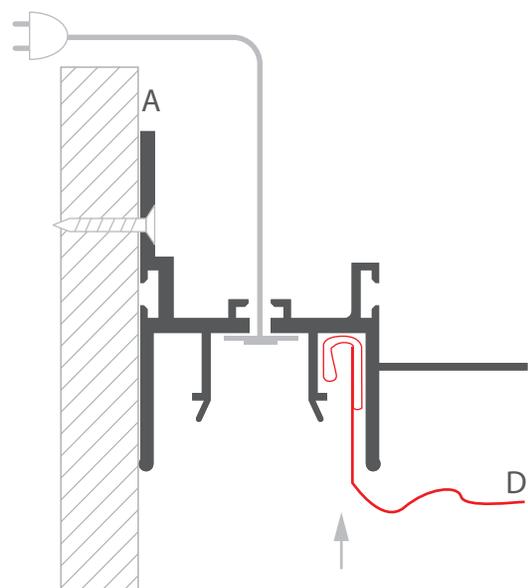

**5.** Insert the cover (B).

